


## how to fold your

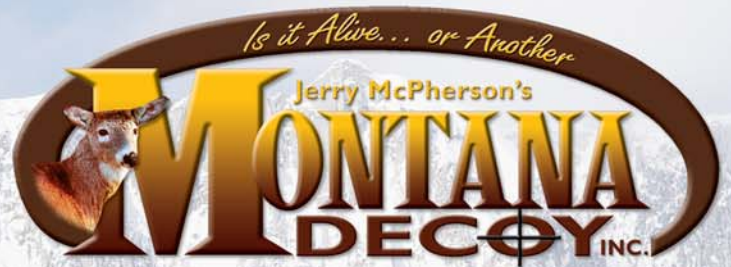

1. Start by holding the decoy vertically out away from your body.
2. Grab the decoy with one hand: thumb pointing up, and the other hand thumb pointing down as shown.
3. To start folding, twist the hand with the thumb pointing up forward and the hand with the thumb pointing down backward.
4. As you start the twisting motion push inward like an accordion, continue to twist and push, then cross your hands and bring the decoy into your body.
5. The band in the decoy will form three rings, use a rubber band to hold the decoy closed. (Tip: tie the rubber band to the elastic attached to the leg so you never lose it.)
6. Congratulations, you've folded the decoy.

Enclosed are two leg poles, insert the long pole into a sleeve sewn inside the decoy that leads up in the head (this pole holds the head up), and the shorter pole in the opposite leg. The sleeve opening is located in the bottom of each decoy leg. Slide the poles up into the sleeve and hook the elastic strip into the adjustable pole clip. Step the pole stakes into the ground and you're set up.

We would love to have your success stories and pictures, or even videos. You can send them to:

**Montana Decoy, Inc.**

Jerry McPherson  
P.O. Box 2377 • 2690 Wagoneer Drive  
Colstrip, Montana 59323  
email: [jmcperson@tgrsolution.net](mailto:jmcperson@tgrsolution.net)  
Check out our web site at [www.montanadecoy.com](http://www.montanadecoy.com)  
Phone: 406-748-3092

MADE IN THE USA



## CAUTION

The Montana Decoy looks so real that all precautions must be taken during archery season. Animals tend to be aggressive during the rut. Also, another hunter might mistake the decoy for the REAL THING! **DO NOT USE** the MONTANA DECOY during rifle season. The user of this product assumes all risk of injury in association with the use of this product.

WHITETAIL DEER III